

# INSTRUCTIONS

## X-Banner



Includes:  
Body Piece  
Arms (x2)

1



Place the X-Banner body piece upright by extending the feet outward. Adjust the height of the telescoping pole on the X-Banner body piece by flipping the switch to the center position. *Having the switch turned to the left or right position will lock the height of the telescoping pole.*

2



Take the two arms with hooks and attach them to the center piece at the top of the telescoping pole on the X-Banner body piece.

3



Using your banner with grommets, attach each of the four corners to the X-Banner hooks, starting with the top first.

4



In order to properly display your banner on the X-Banner body piece, raise the telescoping pole until taut.

